

s a n e u x

### Customer Services

t: +44(0)208 686 5100  
e: technical@saneux.com

4 Imperial Way  
Croydon CR0 4RR

[www.saneux.com](http://www.saneux.com)


s a n e u x

## VBMK001

### SHOWER

One, two and three way thermostatic shower valve mounting kit

### INSTALLATION INSTRUCTIONS

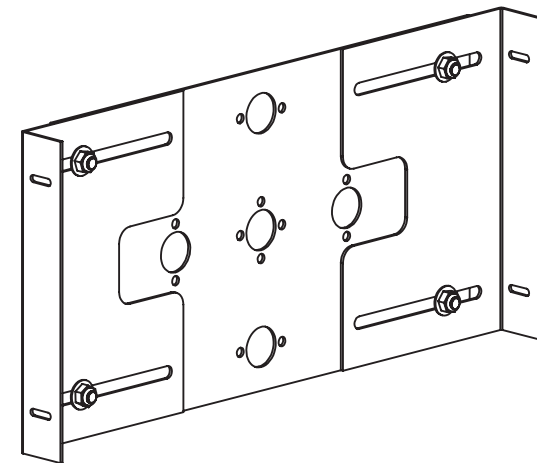

**Included components:**

- |                 |                    |
|-----------------|--------------------|
| x1 Middle Plate | x4 M8x16 Hex Bolts |
| x2 Side Plates  | x4 5x45 Screws     |
| x8 M8 Washers   | x4 M8 Nyloc Nuts   |

**Installation**

1. Firstly, ensure you have all components and fixings. Then assemble the mounting kit loosely to allow the side panels to move.
2. Mark and adjust the kit to fit between the studs. Make sure that the valve will not interfere with already installed pipe work and that the plate is vertically aligned. Once marked and adjusted to the right position, tighten the fixings.
3. Take the valve you intend to use with the kit and remove the plate that comes preinstalled. Ensuring to keep hold of the bolts.
4. Using the same bolts that held the valve plate on, attach the valve to the mounting kit remembering to keep the hot inlet on the **left** side for portrait orientation, and **downward** for landscape.
5. With the screws provided, fit your mounting kit to your marked-out position from step 2.
6. Once the valve is secure, use the valve's provided instructions to properly install the valve. Once the valve is installed, finish the wall surface.

